

INSTALLATION AND CONNECTION OF PARTS


(see Installation Instructions for details)

Installation methods:


SPC Panels: Flat Installation on adhesive

WPC Slats: Flat Installation on adhesive

Cut top and bottom panels
and slats to allow central
panel to overlap 1"

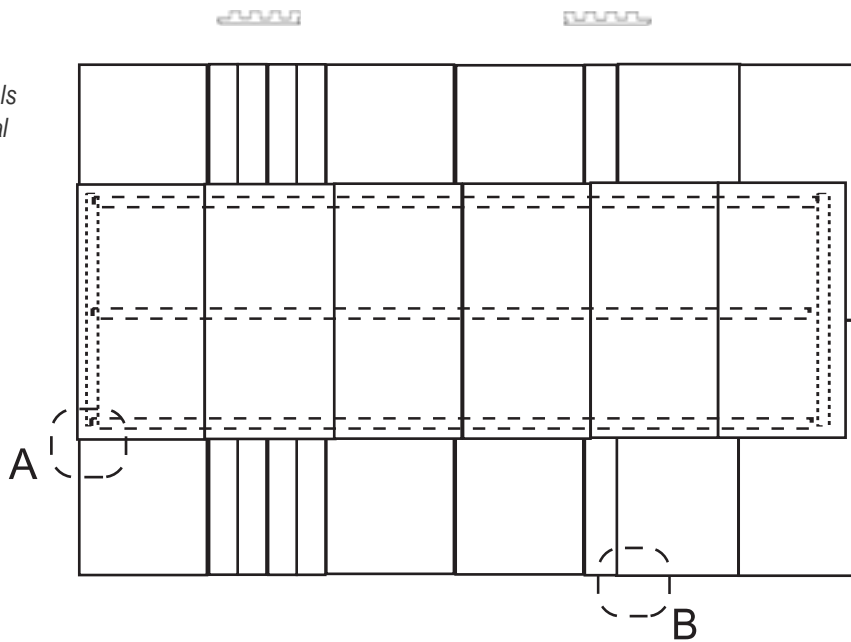

Section A

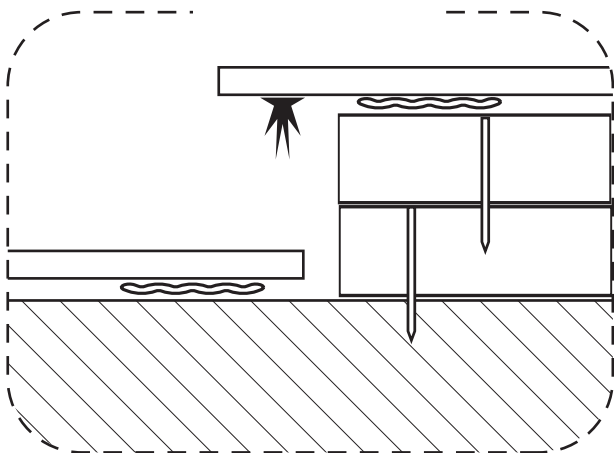

Section B

